
 


FIG. 1

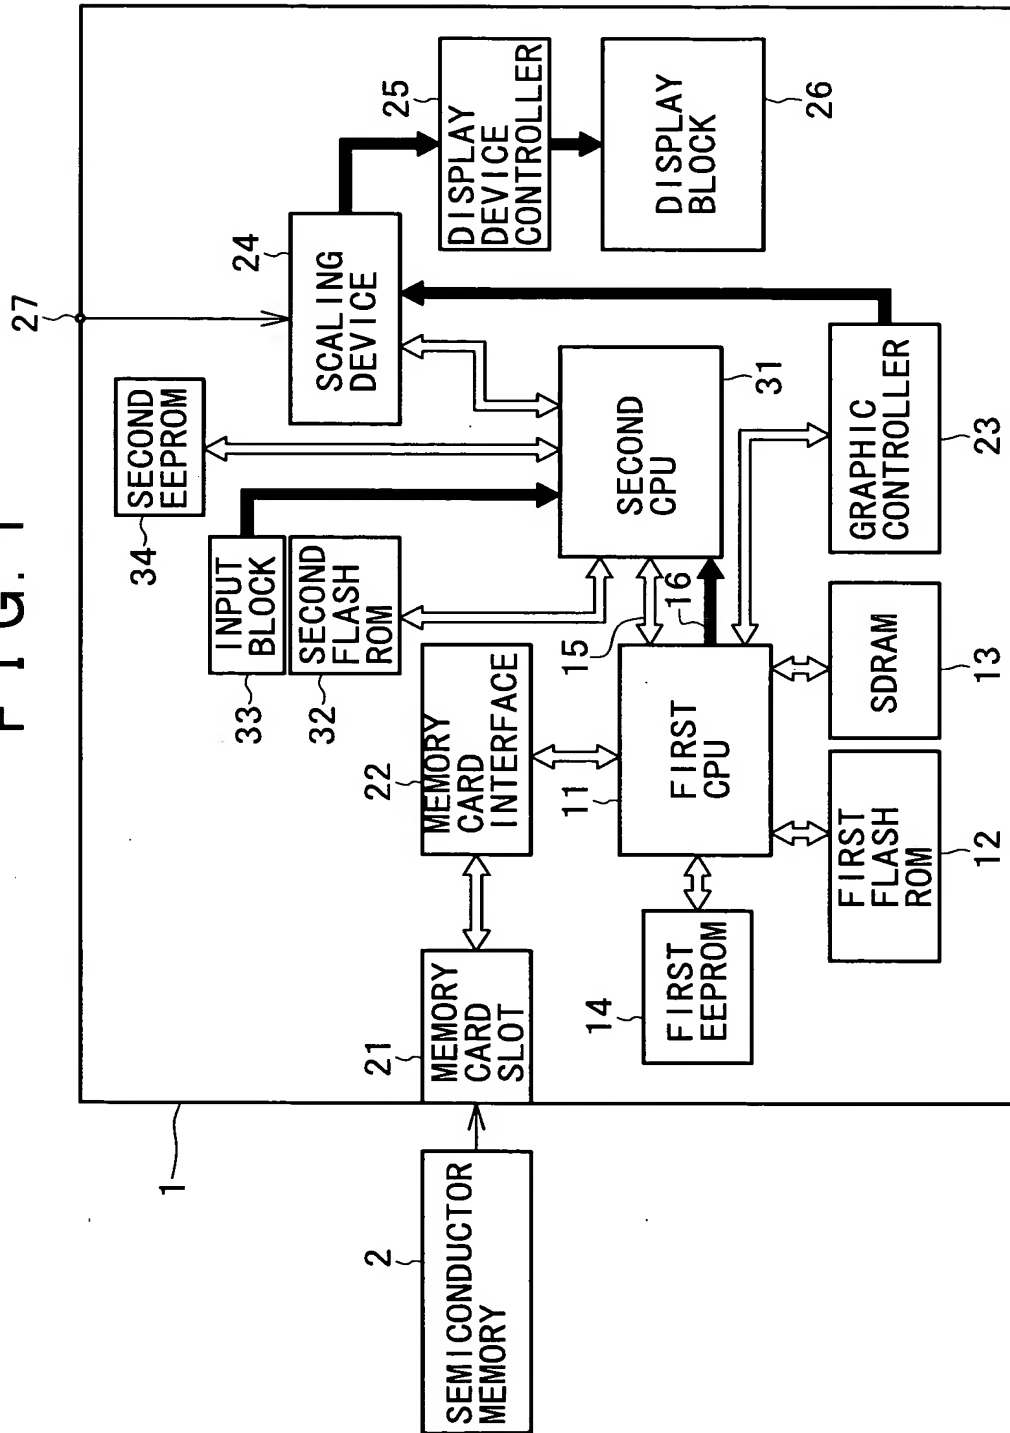 


2/18

FIG. 2

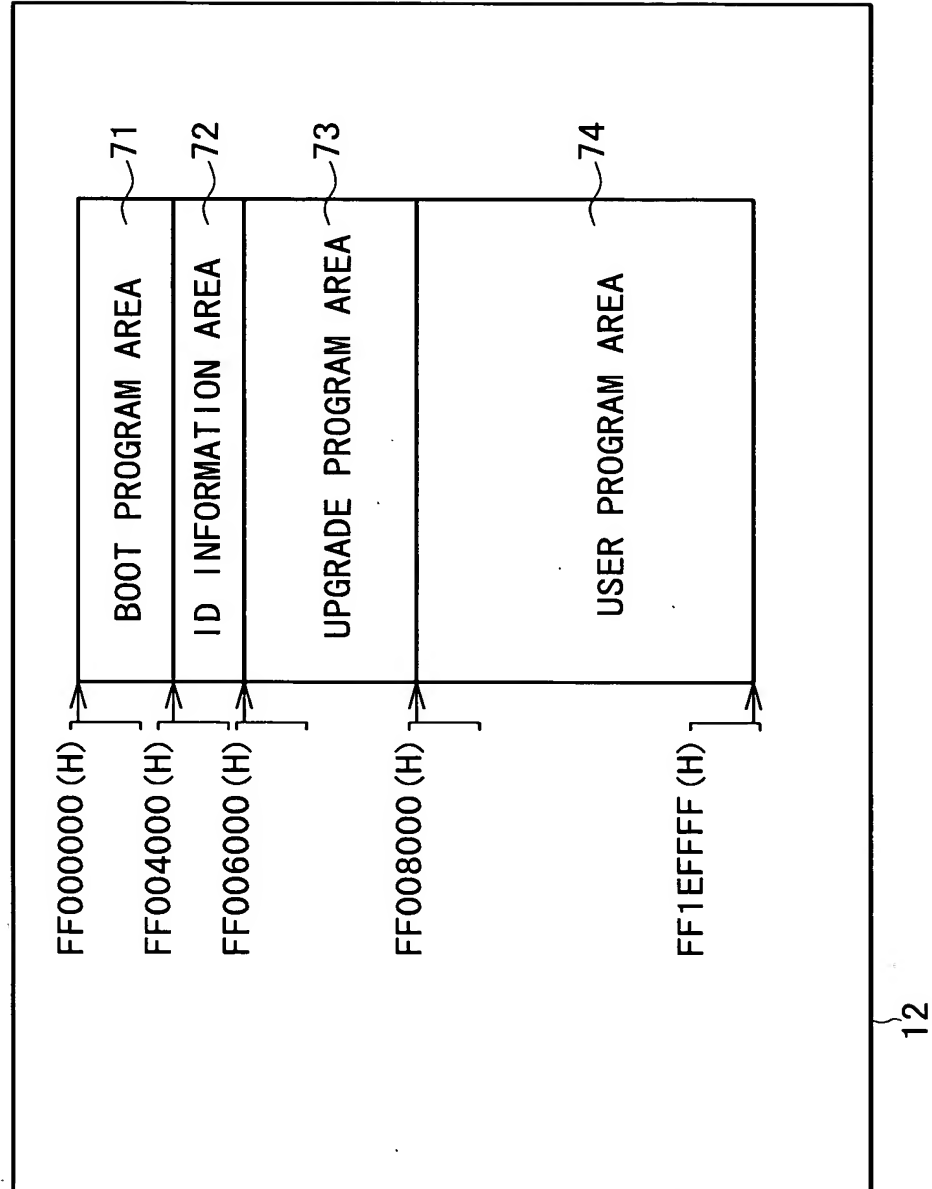


72

 FIG. 4

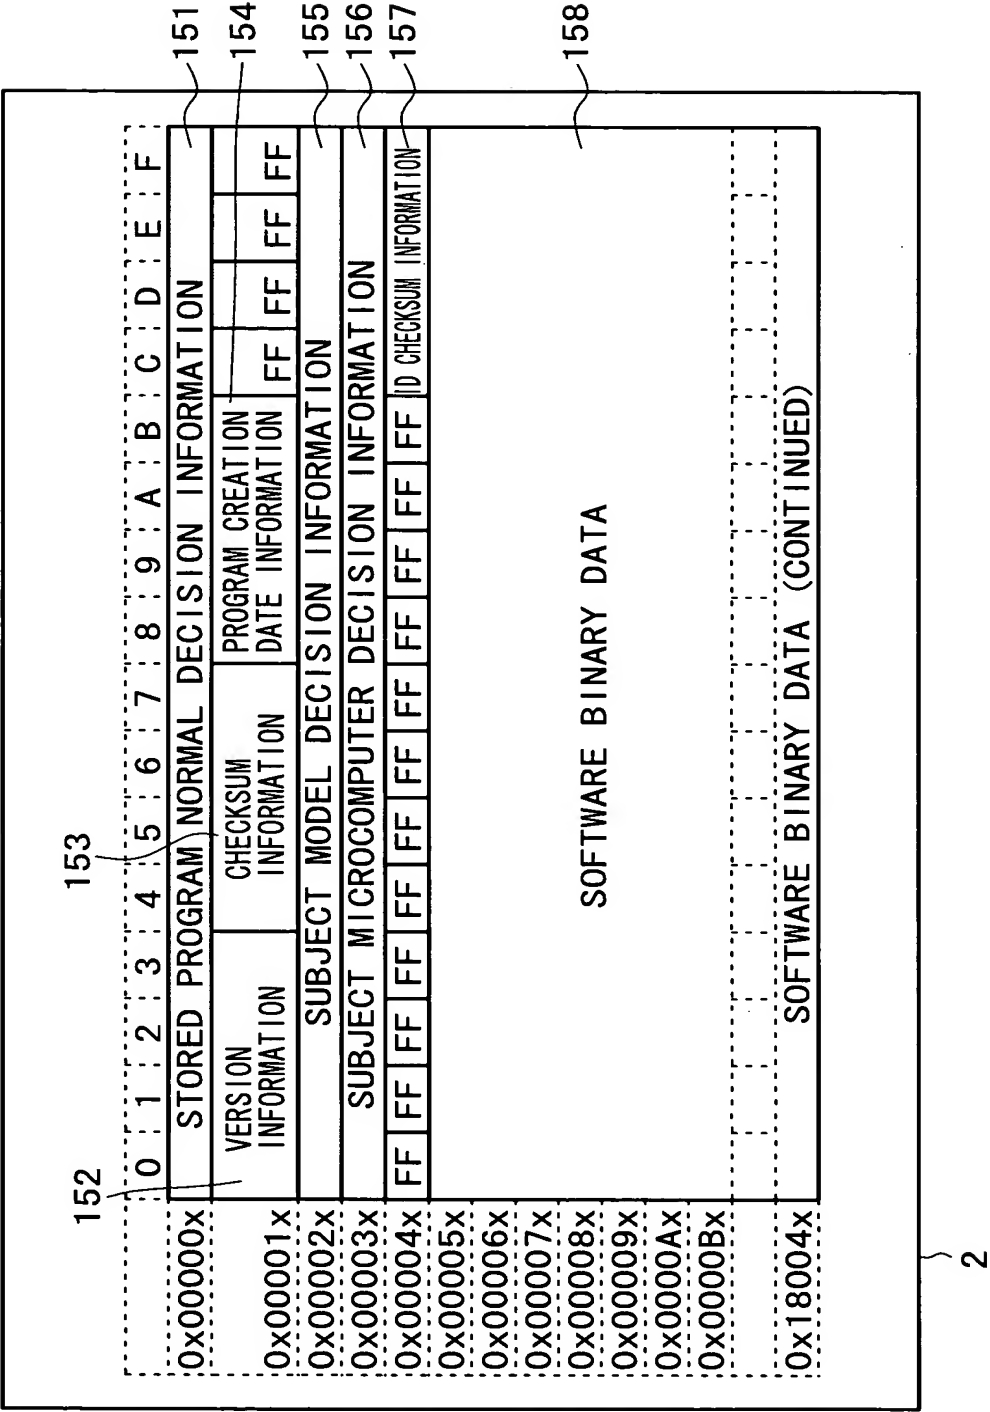


# FIG. 5

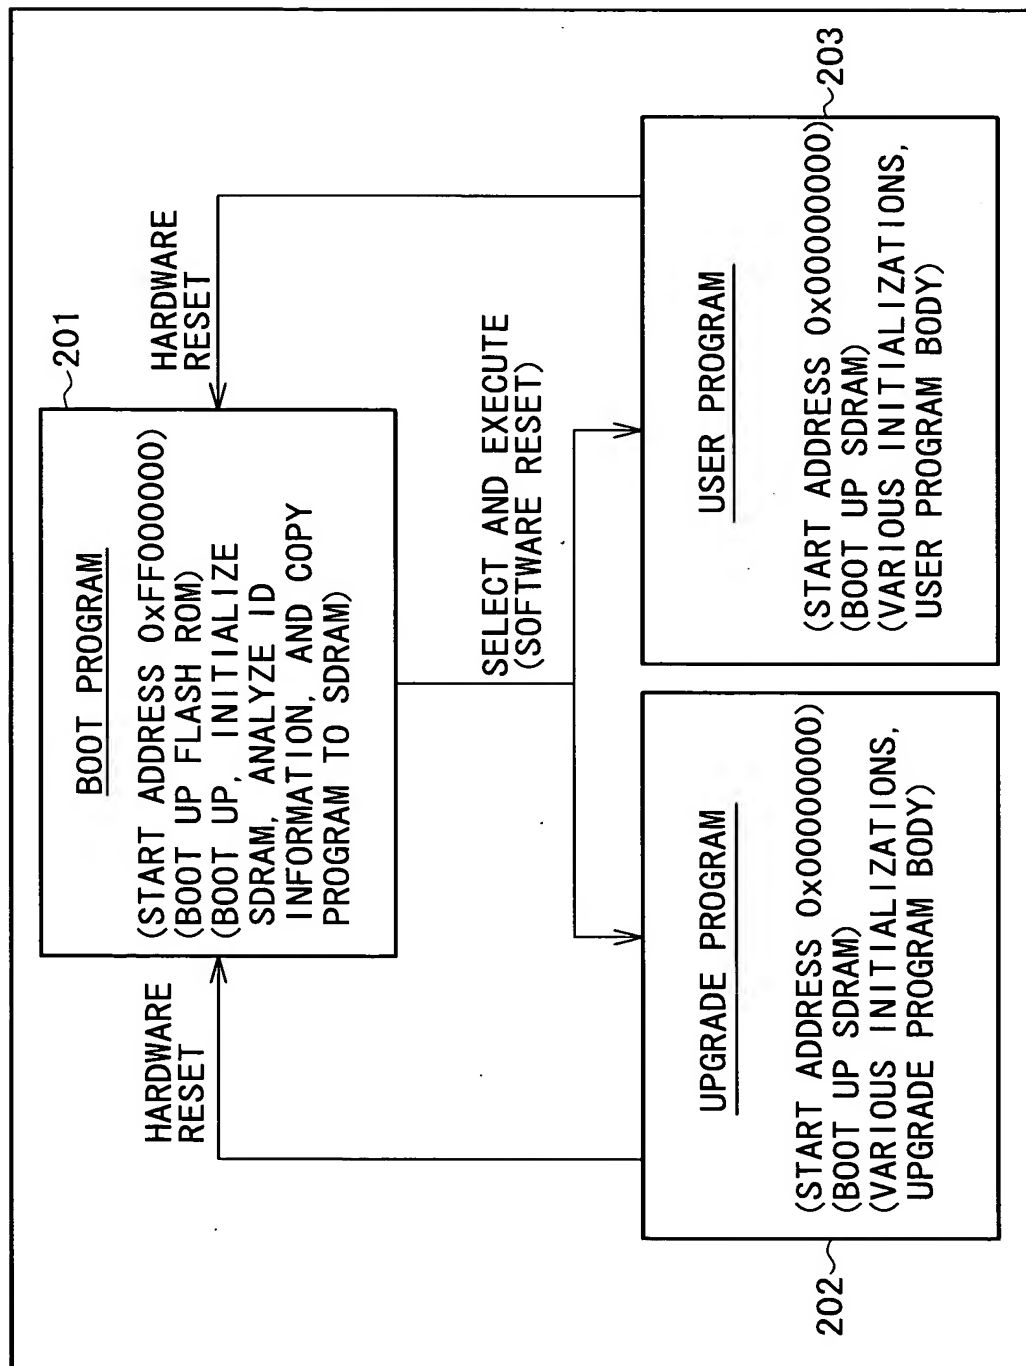 


6/18

 FIG. 6

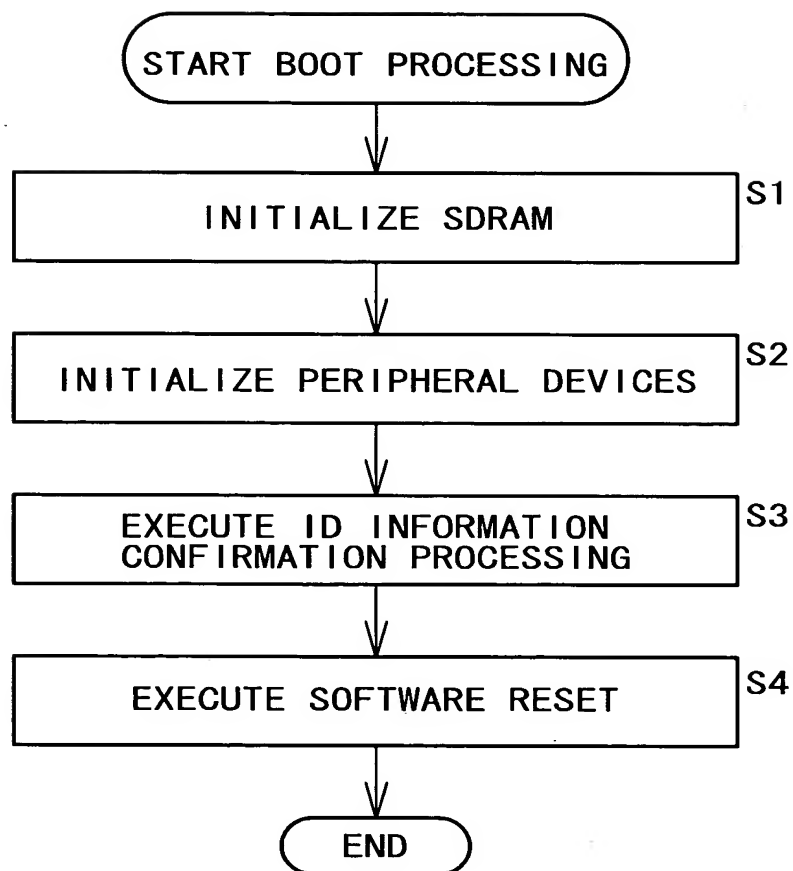


7/18

 FIG. 7

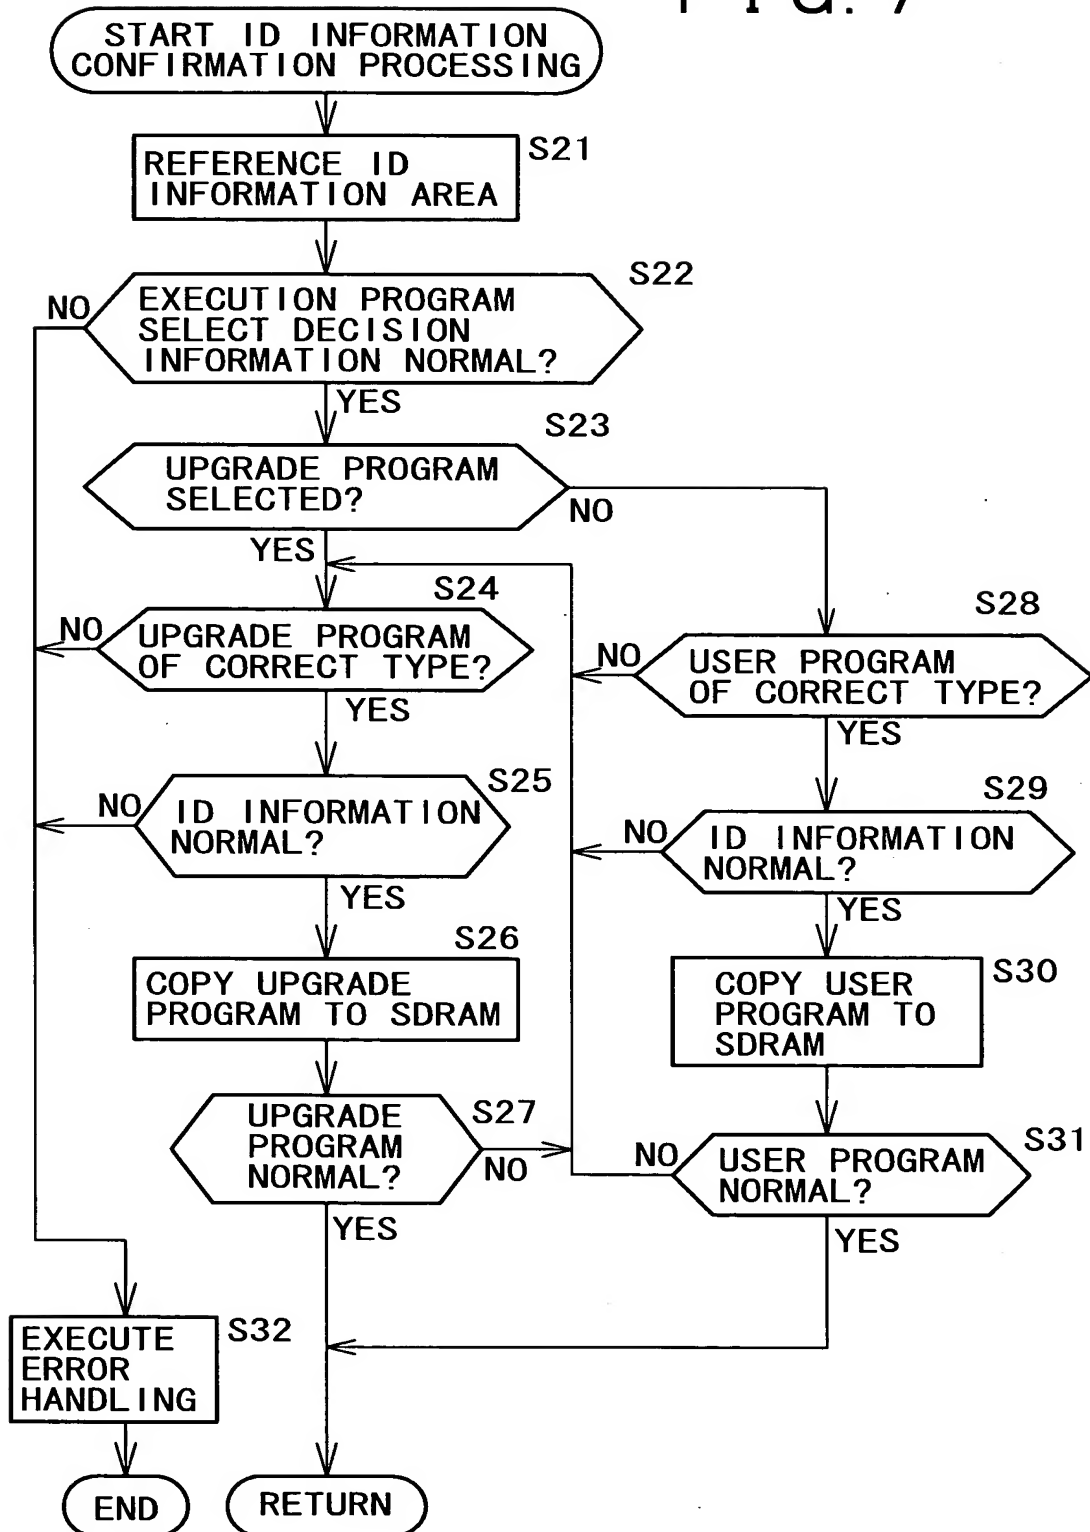

8/18

 
FIG. 8

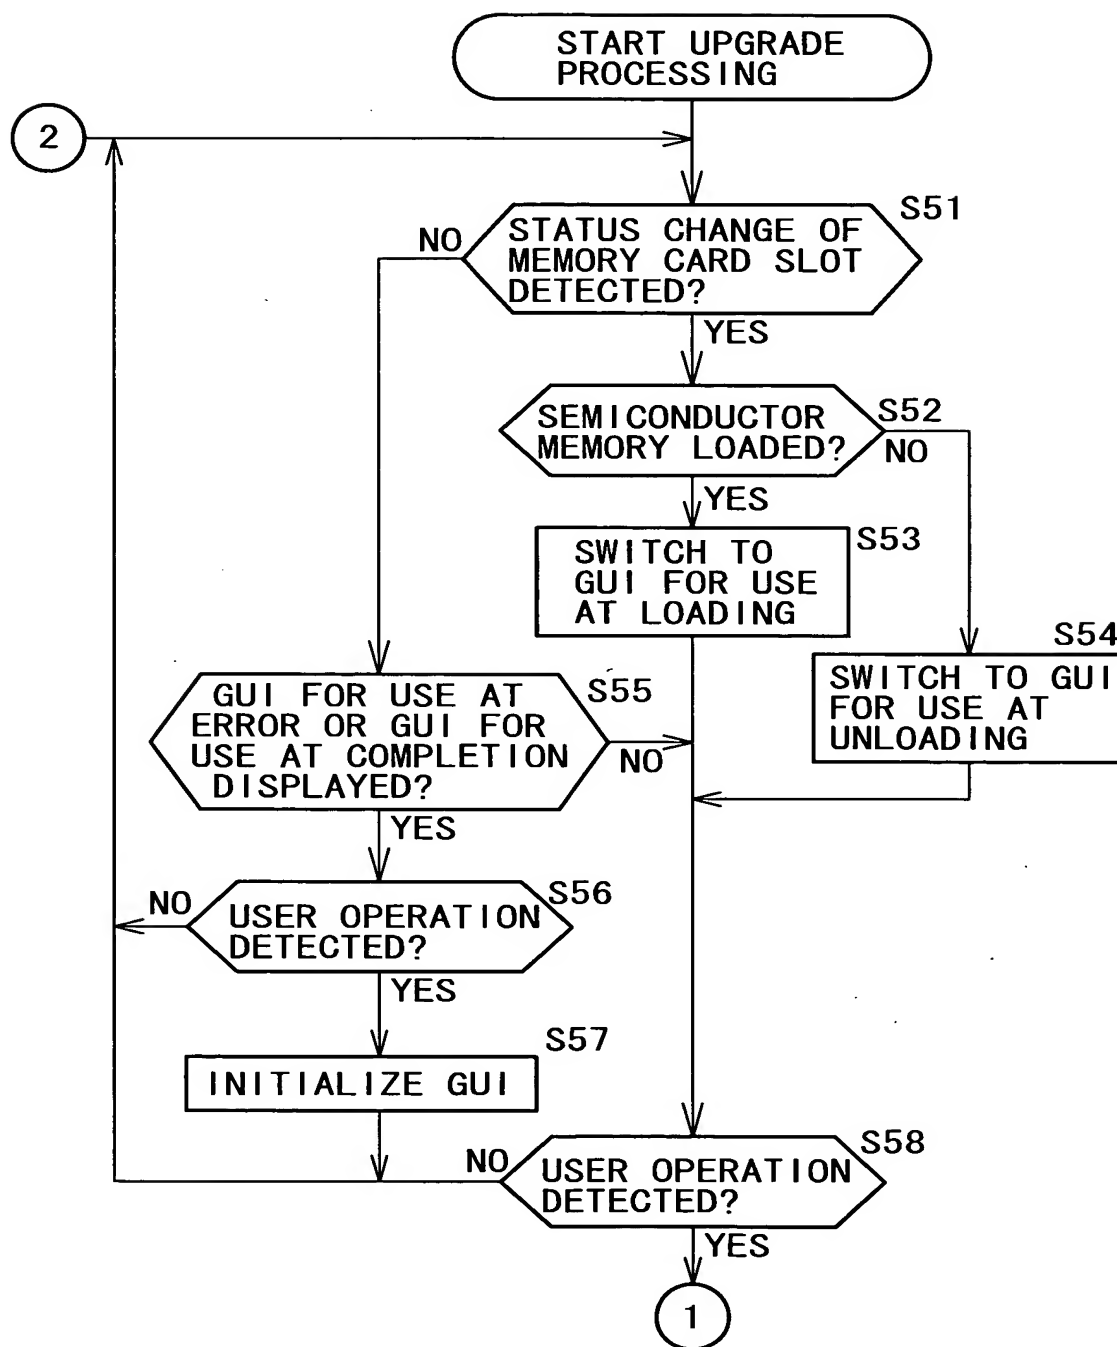



9/18

 FIG. 9

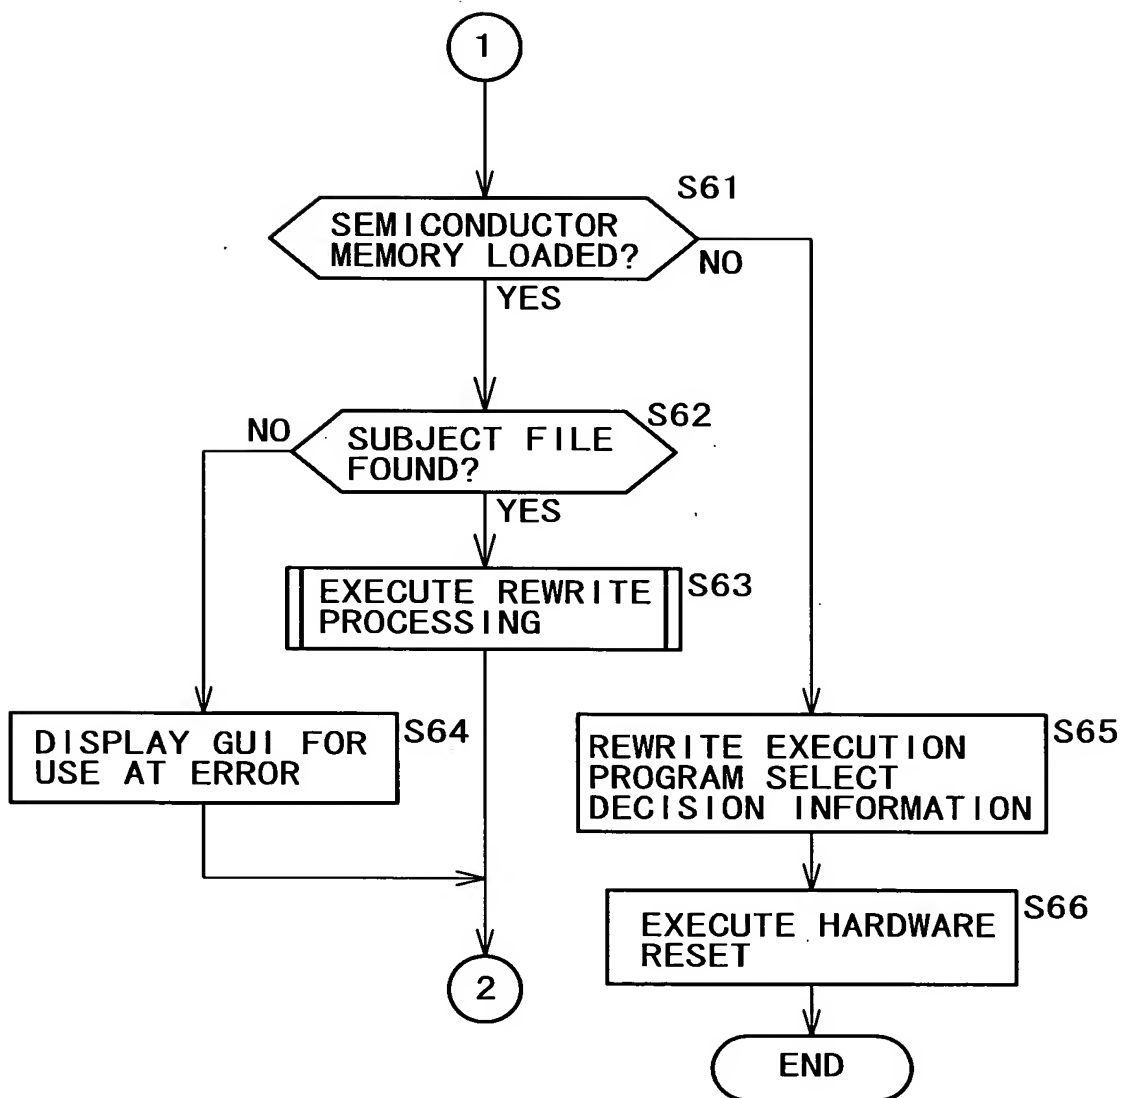

10/18

FIG. 10

Upgrade

211 Home

---

Current Version: 1.00

Upgrade Version: VPL-CX5MS: 2.00

211A Write

UNLOAD MEMORY CARD WHEN YOU DO NOT WRITE.

FIG. 11

Upgrade

221A Home

---

221 Current Version:

Upgrade Version:

Write

SELECT [HOME] TO RETURN TO MS HOME SCREEN.

11/18

FIG. 12

Upgrade	
<div>Home</div> <hr/>	
Current Version: 1.00	
Upgrade Version: VPL-CX5MS: 2.00	
Write	WRITING NORMALLY COMPLETED. <div>OK</div>

231

231A

FIG. 13

Upgrade	
<div>Home</div> <hr/>	
Current Version: 1.00	
Upgrade Version: VPL-CX5MS: 2.00	
Write	WRITING FAILED. <div>OK</div>
	RETRY WRITING.

241

241A

12/18

FIG. 14



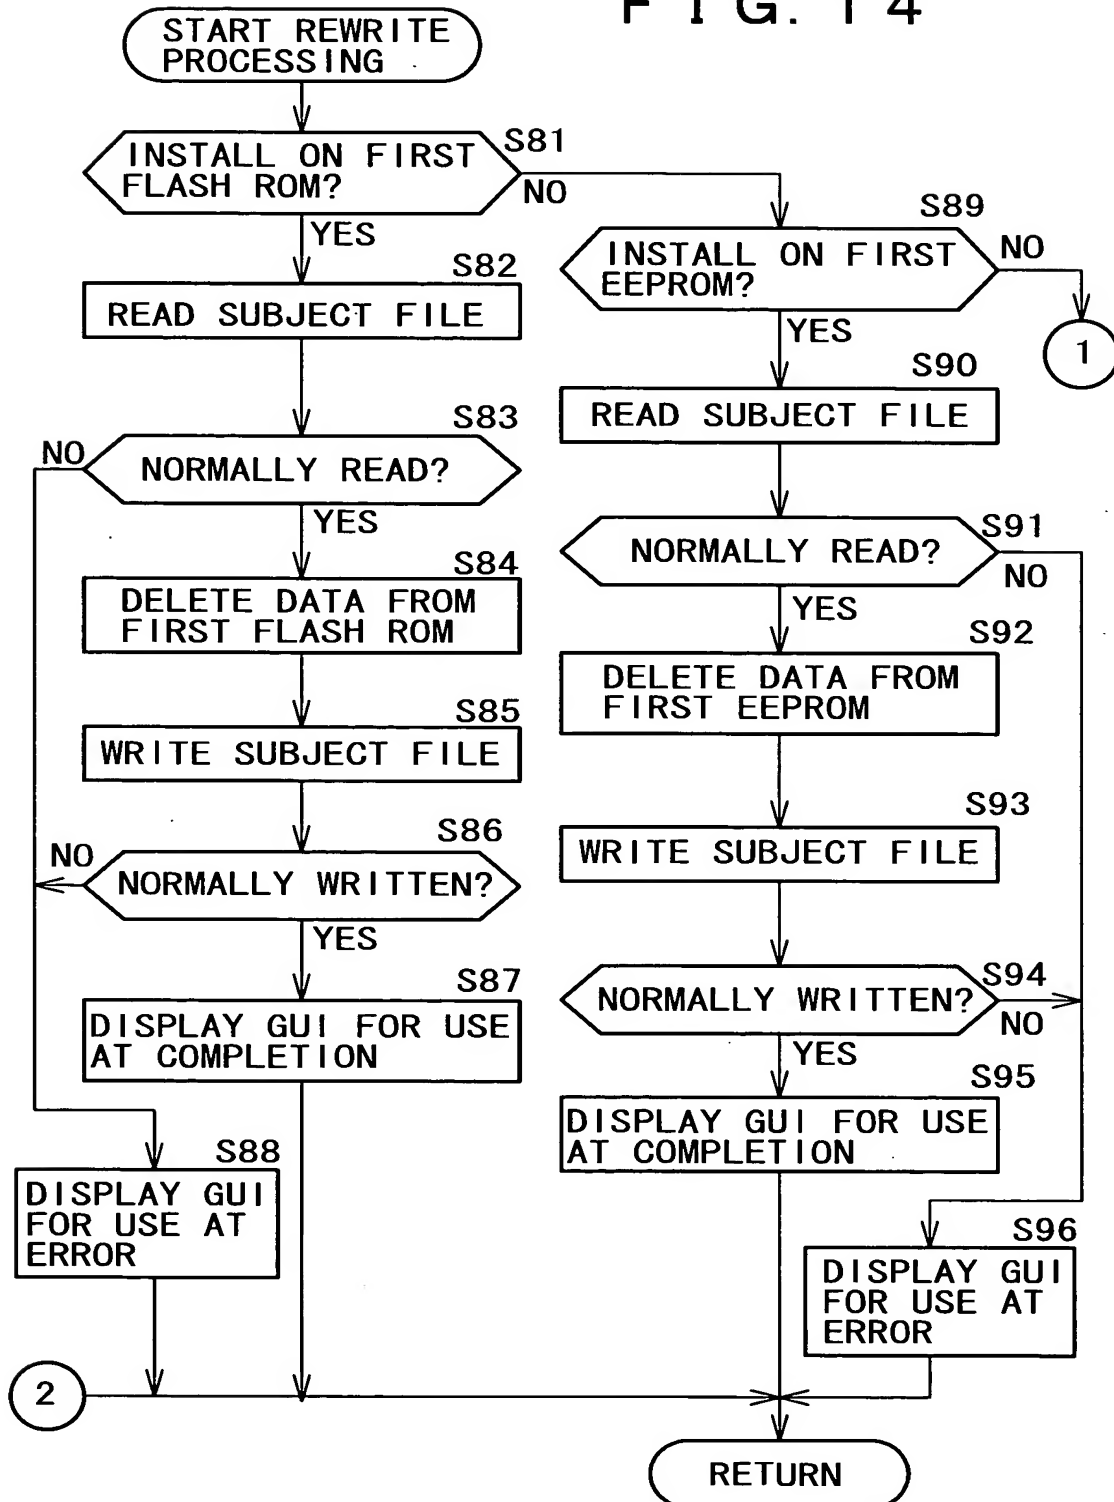 


FIG. 15

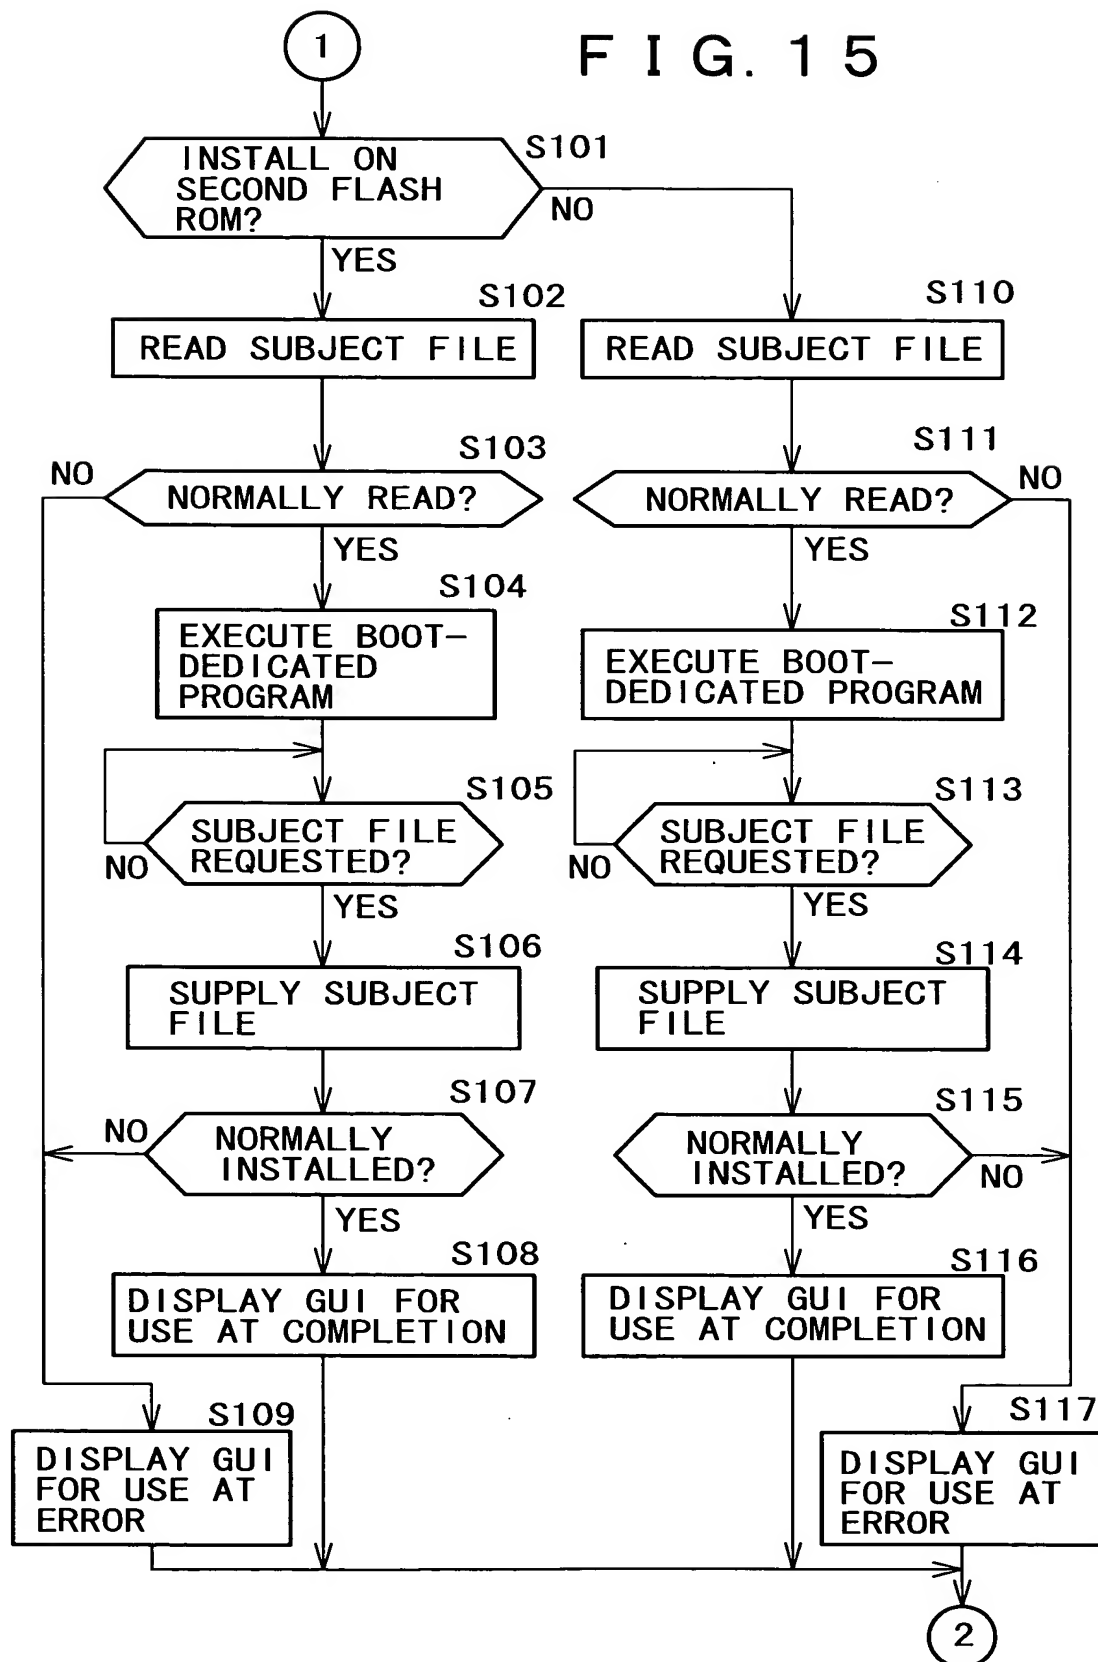 

14/18

 FIG. 16

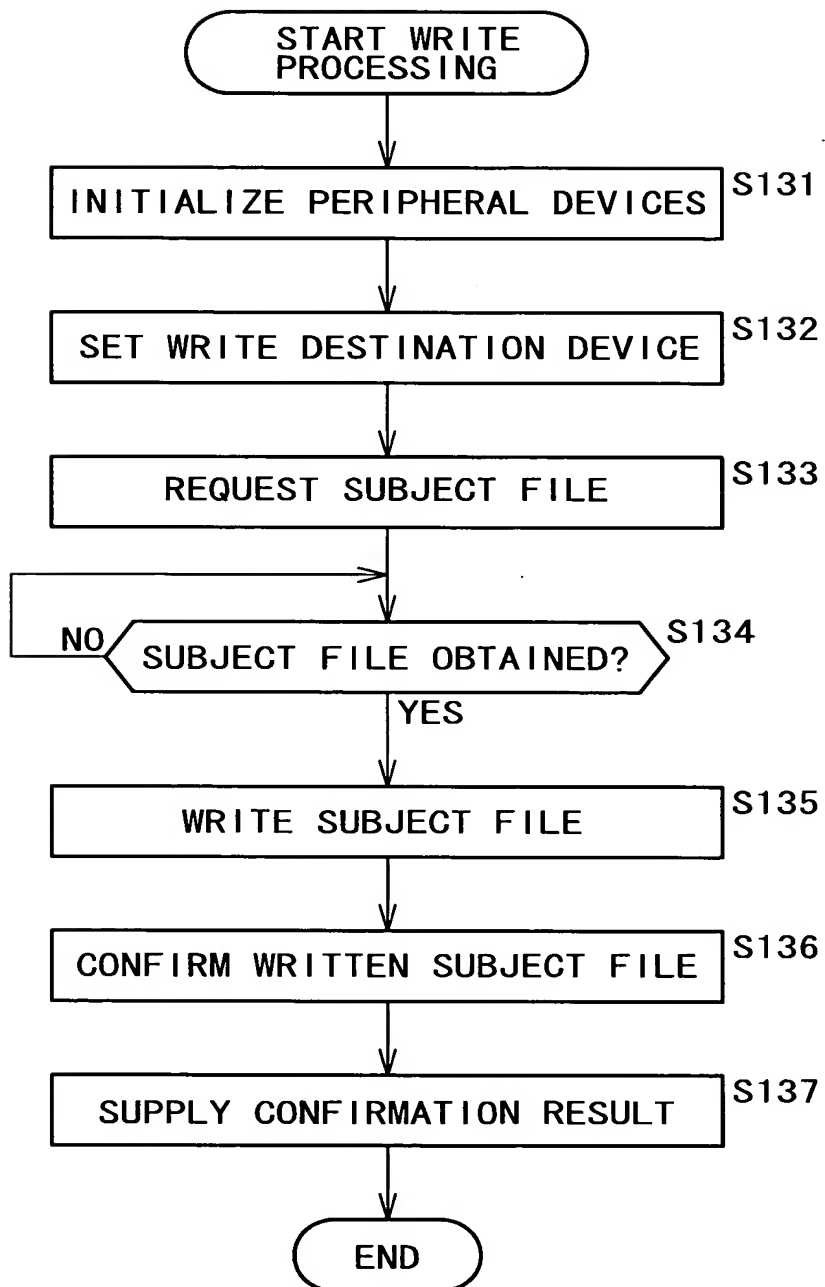

15/18

FIG. 17

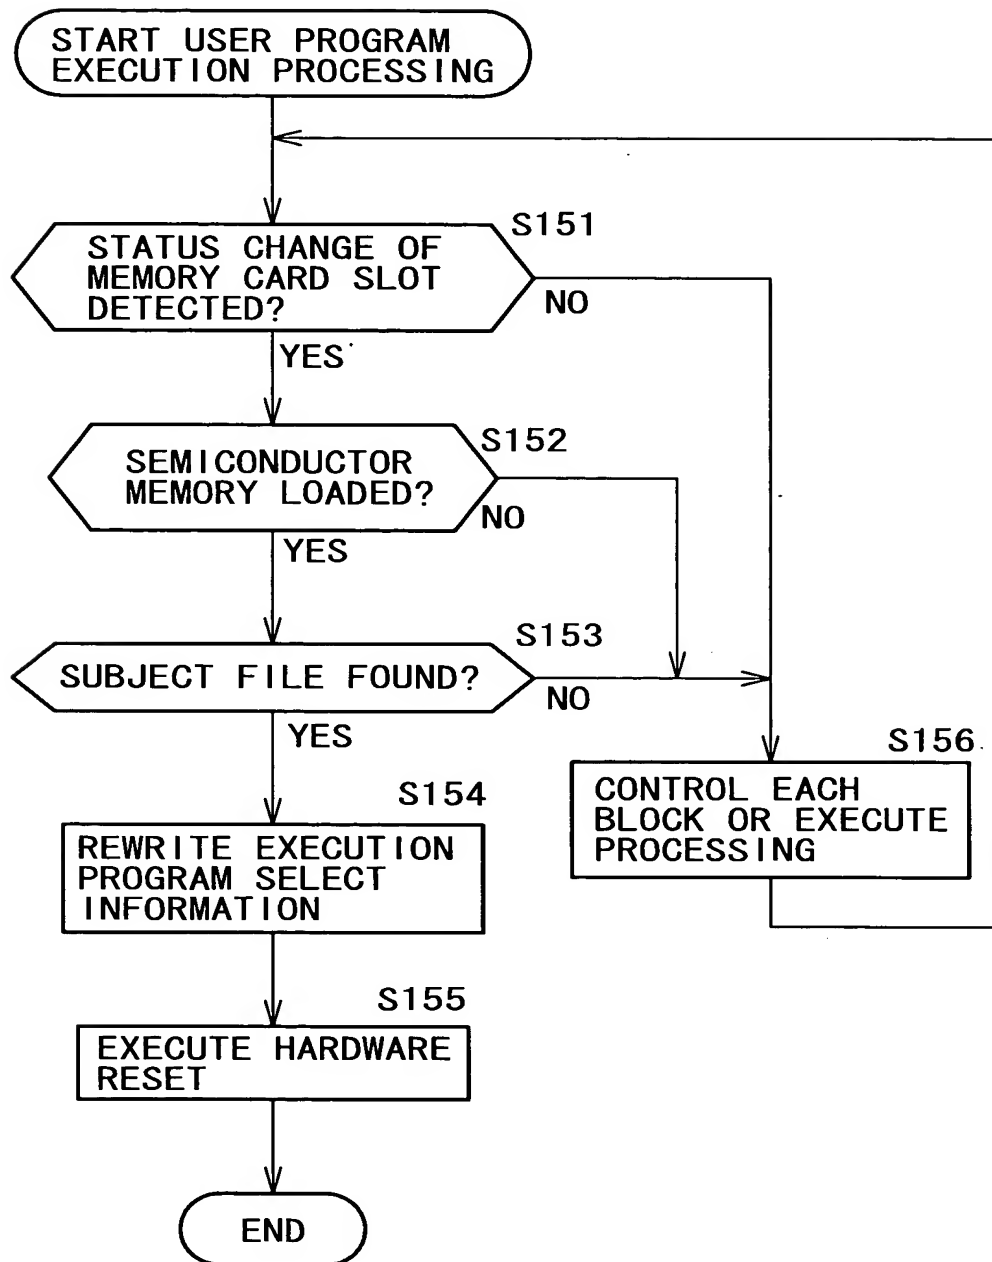 


FIG. 18


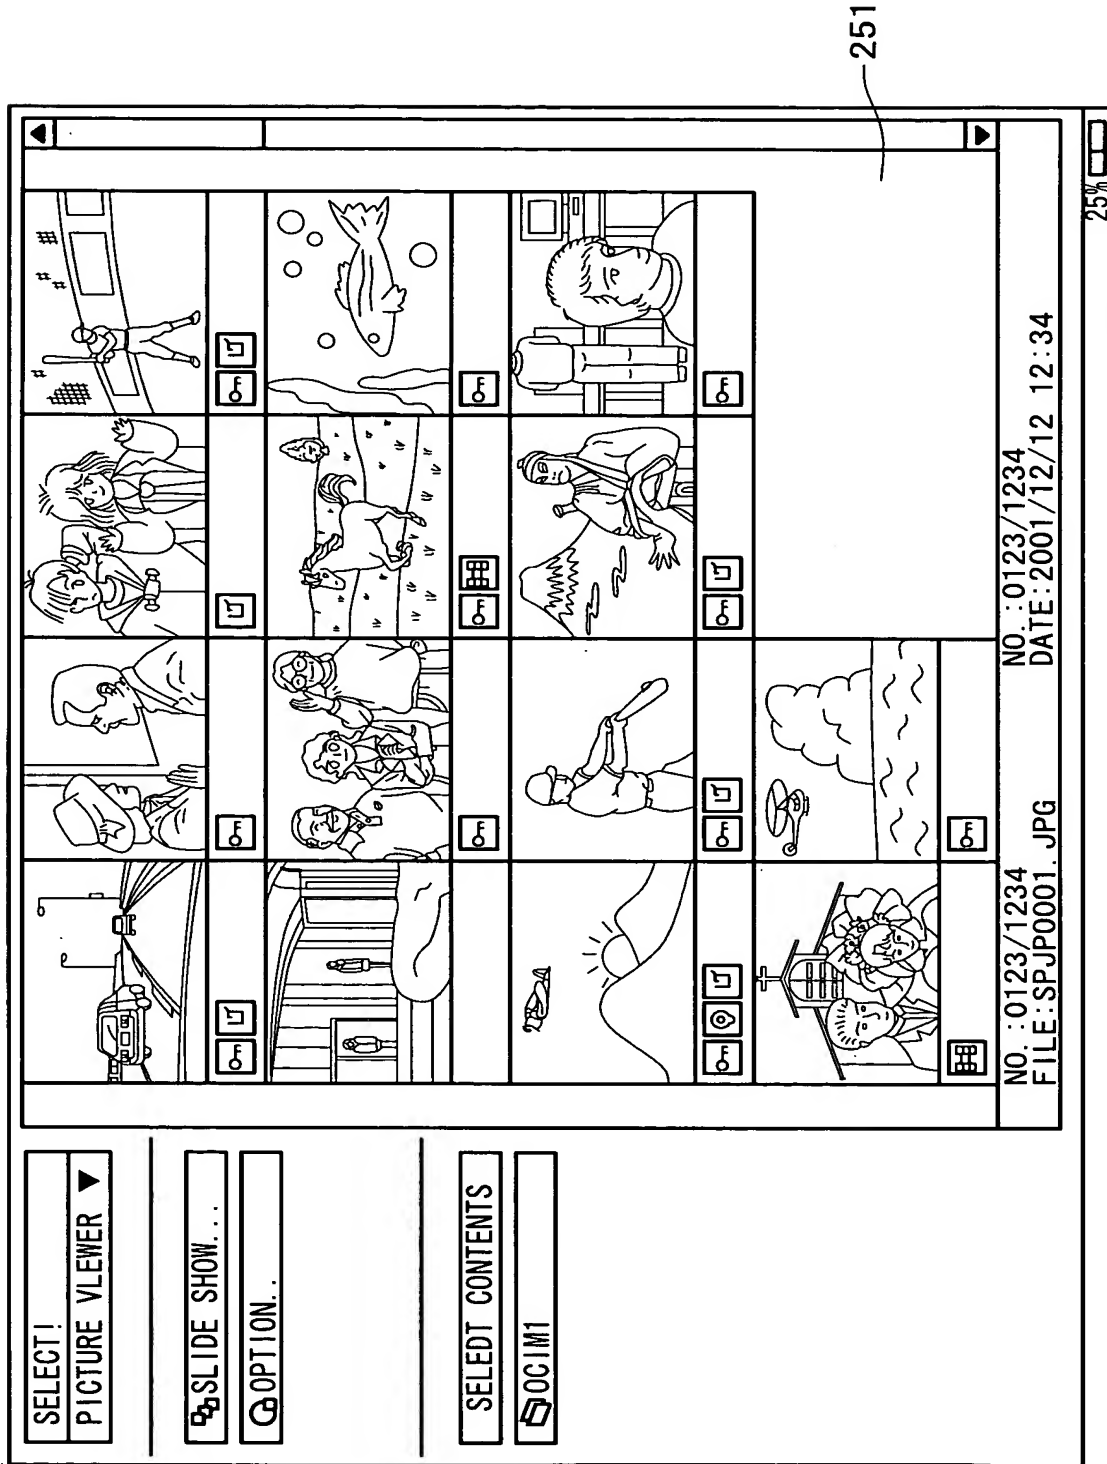 




FIG. 19

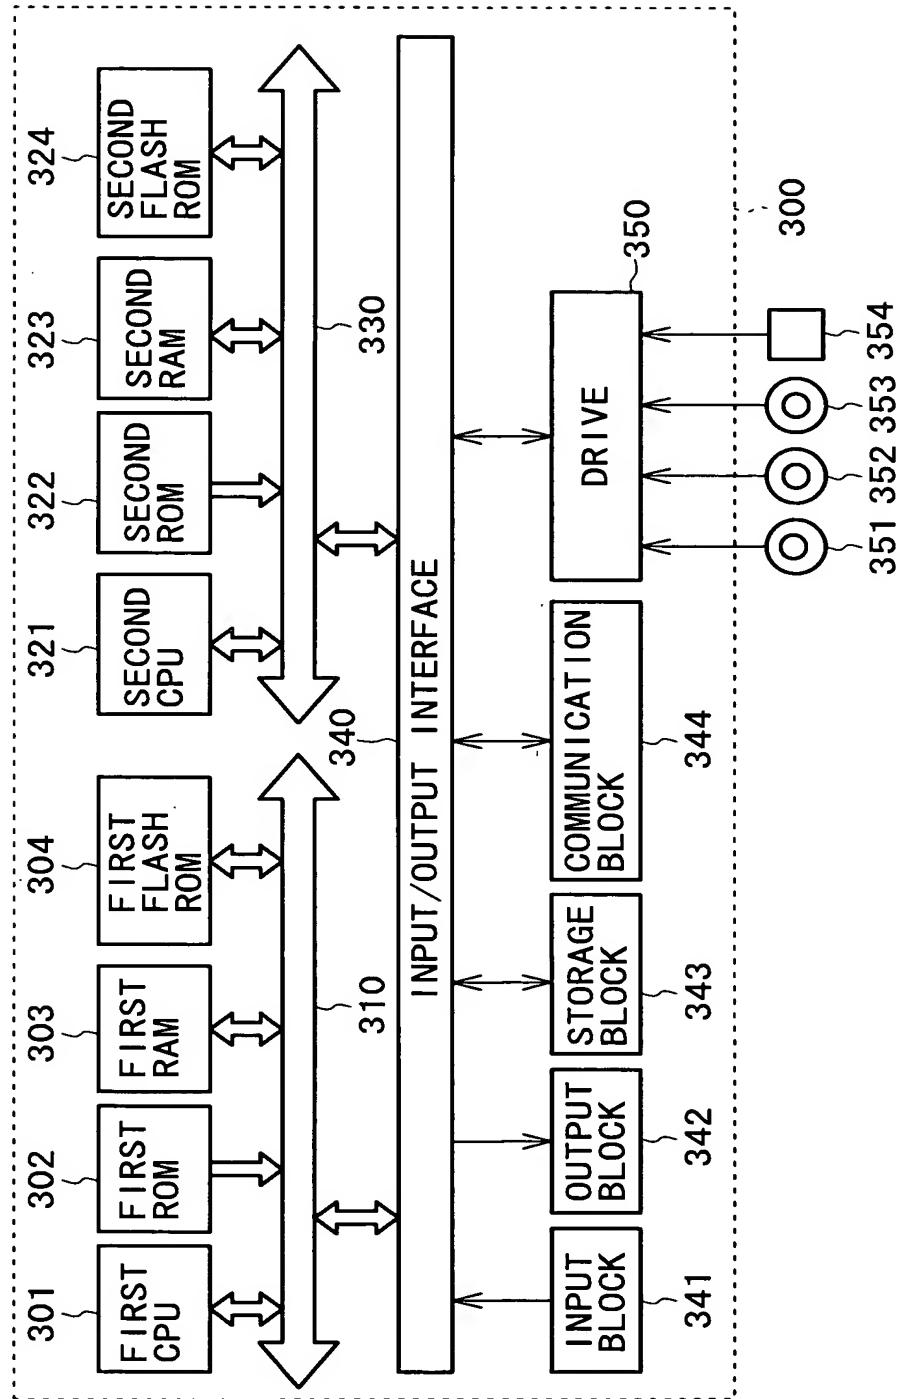 

18/18

FIG. 20

